

SJ-H series Digital Scale Operating Instructions

 
 





Cautions

- Avoid installing the scale in direct sunlight.
- Avoid over / shock load that could cause damage to the scale.
- Use the scale under conditions of -10°C ~ 40°C, less than 85% R.H.
- Do not mix the type of batteries. Replace the batteries all together.
- If the scale is not to be used for a long period of time, remove all batteries.
- Use only specified AC adapter for the scale (AC adapter is optional).

Specifications

SJ-1000H	1000 x 0.5 g / 2.2 x 0.001 lb / 35 x 0.02 oz / 2.2 lb x 0.1 oz
SJ-2000H	2000 x 1 g / 4.4 x 0.002 lb / 70 x 0.05 oz / 4.4 lb x 0.1 oz
SJ-5000H	5000 x 2 g / 11 x 0.005 lb / 176 x 0.1 oz / 11 lb x 0.1 oz
SJ-5001H	5000 x 1 g / 11 x 0.005 lb / 176 x 0.1 oz / 11 lb x 0.1 oz
SJ-12KH	12 kg x 5 g / 26 x 0.01 lb / 423 x 0.2 oz / 26 lb x 1 oz
SJ-20KH	20 kg x 10 g / 44 x 0.02 lb / 705 x 0.5 oz / 44 lb x 1 oz
SJ-30KH	30 kg x 20 g / 66 x 0.05 lb / 1058 x 1 oz / 66 lb x 1 oz
Power	4 x "D" size batteries (not included) or AC adapter (option)
Battery life	Approximately 1600 hours with alkaline cells at 20°C / 68°F
Pan size	230 (W) x 190 (D) mm / 9.1 (W) x 7.5 (D) in.
Dimensions	265 (W) x 250 (D) x 103 (H)mm / 10.4 (W) x 9.8 (D) x 4.1 (H) in.

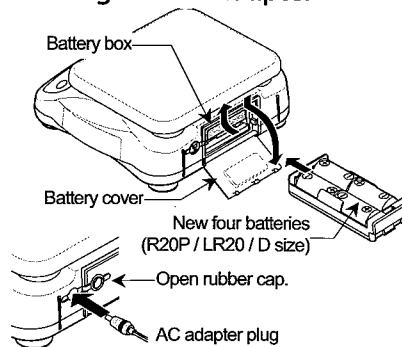 
Keys and Symbols

 ON/OFF key	Turns the scale power on/off.
 RE-ZERO key	Sets the display to zero.
 UNITS key	Changes weighing units, (k)g, lb, oz or lb-oz.
Symbol 	Indicates when the reading is stable.
Symbol ZERO 	Indicates when the scale zero is correct.
Symbol NET 	Indicates when net weight is displayed.
Symbol 	Battery remaining level, showed after power-on only.

Installing batteries / Connecting the AC adapter

Installing / Replacing Batteries

Slide the battery cover downward to open, and push the battery box to unhook and pull it out. Insert 4 batteries (D size) into the battery box, taking extreme care of the polarities.


 


AC adapter (optional)


Verify that the AC adapter is correct. Open the rubber cap and plug the AC adapter.

Weighing procedures

 
 
1. Turn on / off the scale


Press the  key to turn on. The scale displays all segments for a few seconds and then shows zero. Press the  key again to turn off.

2. Select the weighing unit

Press the  key to select weighing unit. The scale will power up with the weighing unit that had been used when turned off last time.

 
 
3. Weighing

 
 
 

 
Verify the reading is zero. If not, press the  key to zero the display. If you use a container for weighing, place an empty container on the weighing pan and press the  key to zero the display.

Place the objects to be weighed on the pan or in the container. When the reading becomes stable, the STABLE indicator  is displayed.

 
 
 
Note

Automatic power-off function

If the scale is left ON and the STABLE is displayed, the automatic power-off function turns power off after approximately 5 minutes. To disable or enable this function, press the  key while pressing the  key.

Then  (disabled) or  (enabled) will be displayed. Select the setting by pressing the  key and press the  key. The scale shows  and returns to the weighing mode.

Error message

	Overload. Remove the objects from the pan.
	The scale is out of zero range or unstable when powered on.
	Low battery. Replace the batteries or use the AC adapter.

Calibration

Please visit the A&D website (<http://www.aandd.co.jp/>).



A&D Company, Limited
3-23-14 Higashi-Ikebukuro,
Toshima-ku, Tokyo 170-0013 JAPAN
<http://www.aandd.co.jp/>

A&D MERCURY PTY. LTD.
32 Dew Street, Thebarton, South
Australia 5031 AUSTRALIA
<http://www.andmercury.com.au/>

1WMPD4001461A

A&D ENGINEERING, INC.
1756 Automation Parkway, San
Jose, California 95131 U.S.A.
<http://www.andonline.com/>

A&D KOREA Limited
8th Floor, Manhattan Bldg. 36-2
Yoido-dong, Youngdeungpo-ku,
Seoul, KOREA
<http://www.andk.co.kr/>

A&D INSTRUMENTS LTD.
Unit 24/26 Blacklands Way, Abingdon
Business Park, Abingdon, Oxon OX14 1DY
United Kingdom
<http://www.aandd-eu.net/>

A&D RUS Co., Ltd.
121357, Российская Федерация, г.Москва,
ул. Верейская, 112 Квартал Кунцево
<http://www.aandd.ru>

English